

Construction of Light Body Kit

1. Please pay attention to the knob circled in red

 Look into the lock hole, and you should see that the screw is actually showing up.
Please turn the knob until the screw disappears.

3. Take out the supporting rod, and look at the round connector. Stick it into lock hold & tighten the screw.






Construction of Umbrella Unit

1. Pay attention to the little go-through hole when looking at the light body directly

2. Insert the metal rod of umbrella through the hole







Copyright (C) 2009 Akicom Corp. All Rights Reserved.

All company and/or product names may be trade names, trademarks and/or registered trademarks of the respective owners with which they are associated. Features, pricing, availability, and specifications are subject to change without notice.

Akicom Corp. 13617 12th St. Unit C, Chino, CA 91710 Tel: 9099021786 Fax: 9090921787 mailto: sales@akicom.com



Construction of Soft Light Box:

1. Please take out the stabilizing frame and put it on the light body by tightening the 4 screws as indicating via red squares in pictures.

2. Please take out the 4 metal sticks for frames of light box, and them onto the hole of stabilizing frame.

3. Please take out the front white cover, and look for the socket on each of the 4 edges. Insert the other ends of metal sticks into these sockets. Some force may be required in order to bend the metal sticks.

4. Please take out the inner white cover. Pay attention to the 4 Velcro tapes at the edge. Then, please cover the light frame as constructed in step 3. Please flip the black cover over partially and pay attention to the 4 Velcro tapes. Connect the tapes from both covers.








insert





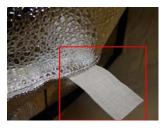





Copyright (C) 2009 Akicom Corp. All Rights Reserved.

All company and/or product names may be trade names, trademarks and/or registered trademarks of the respective owners with which they are associated. Features, pricing, availability, and specifications are subject to change without notice.

> Akicom Corp. 13617 12th St. Unit C, Chino, CA 91710 Tel: 9099021786 Fax: 9090921787 mailto: sales@akicom.com



5. Please pay attention to the Velcro tapes at the end of both black cover and white front cover. Connect those tapes. Then, please pay attention to the back of the light, where a string attached to the black cover is shown. Please tighten it up in order to stabilize the black cover.









6. Your Light box is complete.



Copyright (C) 2009 Akicom Corp. All Rights Reserved. All company and/or product names may be trade names, trademarks and/or registered trademarks of the respective owners with which they are associated. Features, pricing, availability, and specifications are subject to change without notice.

> Akicom Corp. 13617 12th St. Unit C, Chino, CA 91710 Tel: 9099021786 Fax: 9090921787 <u>mailto: sales@akicom.com</u>



1. Please plug in the 2 sockets and the 2 corners on the softbox, force the socket into the center of the softbox and insert the other 2 sticks through the Velcro and connect to the socket





Close the end of the Velcro and the softbox assemble complete. You could add diffuser divider or simply add the diffuser cover out side of the softbox.







Copyright (C) 2009 Akicom Corp. All Rights Reserved.

All company and/or product names may be trade names, trademarks and/or registered trademarks of the respective owners with which they are associated. Features, pricing, availability, and specifications are subject to change without notice.

Akicom Corp. 13617 12th St. Unit C, Chino, CA 91710 Tel: 9099021786 Fax: 9090921787 <u>mailto: sales@akicom.com</u>